CAR-3006 Series
Communication Appliance

User's Manual

Revision: 1.1

CE

This certificate of conformity of CAR-3006 series with actual required safety standards in accordance with 89/366 ECC-EMC Directive and LVD 73/23 ECC

UL

This product meets all safety requirements per UL60950 standard.

Table of Contents

Chapter 1 Introduction 2
1.1 About This Manual 2
1.2 Manual Organization 2
1.3 Technical Support Information 2
1.4 Board Layout 3
1.5 System Block Diagram 3
1.6 Product Specifications 4
1.7 LED Signaling Standard 6
Chapter 2 Getting Started 7
2.1 Included Hardware 7
2.2 Before You Begin 7
2.3 Hardware Configuration Setting 9
2.4 The Chassis 11
2.5 Open the Chassis 12
2.6 Install a Different Processor 12
2.7 Remove and Install DIMM 14
2.8 Remove and Install Compact Flash Card 16
2.9 Remove and Install Battery 16
2.10 Install HDD 17
2.11 Ear Mount Kit Installation 19
2.12 Remove EZIO / LCD 20
2.13 Remove Power Supply 21
2.14 Remove main board 22
2.15 Use a Client Computer 22
Chapter 3 BIOS Setting 25

Chapter 1 Introduction

1.1 About This Manual

This manual contains all required information for setting up and using the CAR-3006 series.

CAR-3006 provides the essential platform for delivering optimal performance and functionality in the value communications appliance market segment. This manual should familiarize you with CAR-3006 operations and functions. CAR-3006 series provide up to six on-board Ethernet ports to serve communication applications like Firewall, requiring six Ethernet ports to connect external network (internet), demilitarized zone and internal network.

CAR-3006 series overview:

- Supports LGA 775 Dual-Core* and Quad-Core* CPU
- Up to 4GB support un-buffered DDR3 1066
- Two USB ports and two COM ports
- Two SATA connectors for SATA Hard disk
- PCI-E architecture with totally six x1 PCI-E interfaces
- One PCI-E x8 Golden finger GF reserved for proprietary daughter card in R/M
- Provides absolute high flexibility of customized I/O configuration

1.2 Manual Organization

This manual describes how to configure your CAR-3006 system to meet various operating requirements. It is divided into three chapters, with each chapter addressing the basic concept and operation of this system.

Chapter 1: Introduction. This section describes how this document is organized. It includes brief guidelines and overview to help find necessary information.

Chapter 2: Hardware Configuration Setting and Installation. This chapter demonstrated the hardware assembly procedure, including detailed information. It shows the definitions and locations of Jumpers and Connectors that can be used to configure the system.

Chapter 3: Operation Information. This section provides illustrations and information on the system architecture and how to optimize its performance.

1.3 Technical Support Information

Users may find helpful tips or related information on Caswell's web site: ***http://www.portwell.com*** A direct contact to Caswell's technical person is also available. For further support, users may also contact Caswell's headquarter in Taipei or local distributors.

1.4 Board Layout

Figure 1-1 Board Layout of CAR-3006 M/B

1.5 System Block Diagram

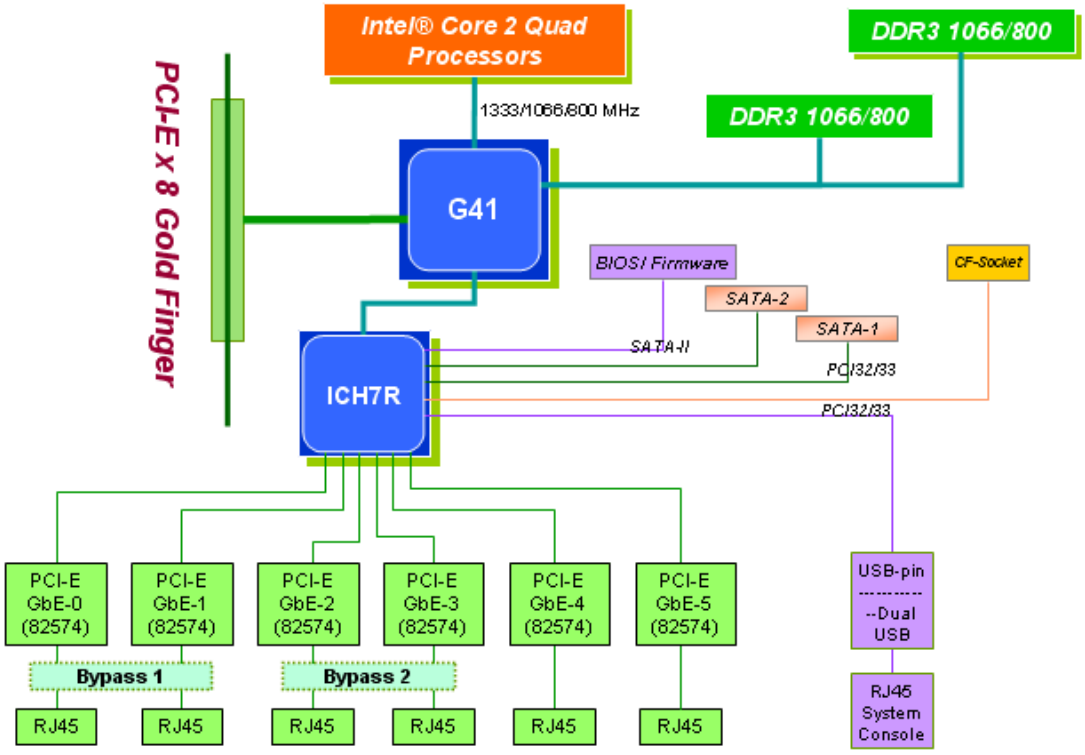

Figure 1-2 CAR-3006 Basic Block Diagram

1.6 Product Specifications

1.

#	Feature	Detailed Description
1	CPU	Intel LGA 775 Dual-Core* and Quad-Core* CPU
2	CPU Board	◆ CAPB-3000VR with Intel® G41 / ICH7R chipset ◆ Board size: 248 mm / 9.8” (L) x 193 mm / 7.6” (W)
3	System Memory	◆ 2 DIMM slots. ◆ Supports un-buffered DDR3 1066 ◆ Up to 4GB
4	Power Supply	◆ Full range ATX PSU with total 200W power output will be required. ◆ Certification: CE, UL, 3C ◆ Dimension: 81.5 x 150 x 40.3 mm
5	Ethernet	◆ Six PCI-E (x1) Gigabit Ethernet port based on Intel 82574 in two bypass segments from ICH7R.
6	SATA & IDE Interfaces	◆ Two SATA Interfaces on board ◆ One IDE channel from ICH7R supports one Compact Flash Socket.
7	Front Panel	◆ 6 RJ-45 connector for PCI-E (x1) GbE interfaces ◆ Hardware Reset Button ◆ System LED: Power, Data access. ◆ Bypass LED ◆ Ethernet LED: For every Ethernet interface there should be LEDs for link status and speed of LAN-ports.
8	Rear Panel	◆ AC power inlet ◆ On/Off switch ◆ Fan opening for system ventilation.
9	Golden finger	◆ One PCI-E x8 GF reserved for proprietary daughter card in R/M
10	Dimension	◆ W:443mm/17.4” x D:406.4mm /16” x H: 44mm /1.73” (1U)
11	Environmental requirement	

	Operating	Storage
Acoustics	< 55dB	--
Temperature	0°C to 40°C	-20°C to 75°C
Relative Humidity	10 to 90% RH	5 to 95% RH
Shock	0.5 Sine shock, 10G peak, 10 +/- 3 ms on (X,Y,Z) axis	
Vibration	0.5G (Peak) / 5~500 Hz, 2hours at each of Z axis	(Packaged) Sine Wave,2.0G / 5~500 Hz, 2hours at each axis(X,Y,Z)
Transportation		(Packaged) 0.5 sine shock, 50G peak on each surface.
Drop		(Packaged) H= 1.2M

#	Feature	Detailed Description
		Random Vibration | | (Packaged) Sine Wave,2.8G / 5~500 Hz, 1hours at each axis(X,Y,Z)

Note 1: For system stability and performance, please install Fedora Core 4 (2.6.11-1.1369) and Intel 82574 driver version e1000e-0.5.8.2 and add Linux kernel option on boot loader

Note 2: For Linux kernel 2.4 distribution, add kernel option on boot loader “hda=noprobe hdb=noprobe”
This parameter should increase the SATA HDD performance
For example: kernel /boot/vmlinuz-2.6.9-42.0.3.ELsmp ro root=LABEL=/ rhgb quiet had=noprobe hdb=noprobe

Note 3: For Linux kernel 2.6 distribution add kernel option on boot loader “ all-generic-ide”
For example: kernel /boot/vmlinuz-2.6.9-42.0.3.ELsmp ro root=LABEL=/ rhgb quiet all-generic-ide ==> **"all-generic-ide"**, this option will let kernel identify the device on IDE bus, and enable DMA

Note 4: For system stability, when execute software reset, system will delay 2~3 seconds; when execute hardware reset, system will cut off the power 1~2 seconds, the foregoing situation is normal.

Because of chipset limitations

* If system populated 2 DIMM sockets with double-side memory modules, the system may randomly occurs unstable performance.

1.7 LED Signaling Standard

1. Power and Data-access LED

Lettering	Symbol	Function	Color	Signaling
PWR		Power status	Green	Off – No power, system off. On – Power good, system on.
Data Access		Data Access	Red	Off – no data access through IDE or SATA channel On – data is in transition through IDE or SATA channel

2. Ethernet LED

Label	Color	Indication	Status
ACT/LINK	**Green Or Others**	**On**	1. The Ethernet port is receiving power. 2. Good linkage between the Ethernet port and its supporting hub.
		Off	1. The adapter and switch are not receiving power. 2. No connection between both ends of network cable. 3. The drivers of Ethernet have not been loaded or does not function correctly.
	Green Or Others	**Flashing**	The adapter is sending or receiving network data. The frequency of the flashes varies with the amount of network traffic.
SPEED	**Yellow**	**On**	ACT/LNK LED must on then this LED show the operating at 1000 Mbps. If ACT/LINK is off and this function will be disable.
	Green	**On**	ACT/LNK LED must on then this LED show the operating at 100 Mbps. If ACT/LINK is off and this function will be disable.
		Off	ACT/LNK LED must on then this LED show the operating at 10 Mbps. If ACT/LINK is off and this function will be disable.

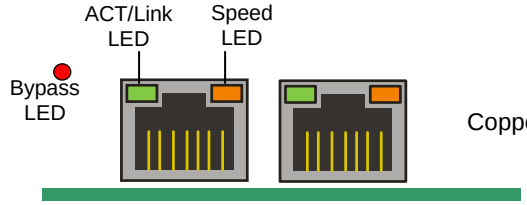

Copper Ethernet Interface

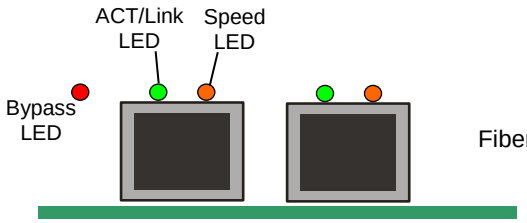

Fiber/SFP Ethernet Interface

3. Bypass LED

LED Status	green	red	off
Bypass Mode/Status	normal mode	bypass mode, triggered by WDT expiring	power off, in normal or bypass mode which is defined by customer

Chapter 2 Getting Started

This section describes how the hardware installation and system settings should be done.

2.1 Included Hardware

The following hardware is included in package:

- CAR-3006 Communication Appliance System Board
- One null serial port cable

Note: "Rack Mount Instructions - The following or similar rack-mount instructions are included with the installation instructions:

A) Elevated Operating Ambient - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (Tma) specified by the manufacturer.

B) Reduced Air Flow - Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.

C) Mechanical Loading - Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.

D) Circuit Overloading - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

E) Reliable Earthing - Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g. use of power strips)."

2.2 Before You Begin

To prevent damage to any system board, it is important to handle it with care. The following measures are generally sufficient to protect your equipment from static electricity discharge:

When handling the board, use a grounded wrist strap designed for static discharge elimination and touches a grounded metal object before removing the board from the antistatic bag. Handle the board by its edges only; do not touch its components, peripheral chips, memory modules or gold contacts.

When handling processor chips or memory modules, avoid touching their pins or gold edge fingers. Restore the communications appliance system board and peripherals back into the antistatic bag when they are not in use or not installed in the chassis.

Some circuitry on the system board can continue operating even though the power is switched off. Under no circumstances should the Lithium battery cell used to power the real-time clock be allowed to be shorted. The battery cell may heat up under these conditions and present a burn hazard.

WARNING!

1. **"CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS"**
2. **This guide is for technically qualified personnel who have experience installing and configuring system boards. Disconnect the system board power supply from its power source before you connect/disconnect cables or install/remove any system board components. Failure to do this can result in personnel injury or equipment damage.**
3. **Avoid short-circuiting the lithium battery; this can cause it to superheat and cause burns if touched.**
4. **Do not operate the processor without a thermal solution. Damage to the processor can occur in seconds.**
5. **Do not block air vents. Minimum 1/2-inch clearance required.**

2.3.1 CAR-3006 System Board Jumper

In general, jumpers on CAR-3006 system board are used to select options for certain features. Some of the jumpers are configurable for system enhancement. The others are for testing purpose only and should not be altered. To select any option, cover the jumper cap over (Short) or remove (NC) it from the jumper pins according to the following instructions. Here NC stands for “Not Connected”.

Location of Jumpers

CAPB-3000VR ZR0 jumper setting: (default setting:”*”)

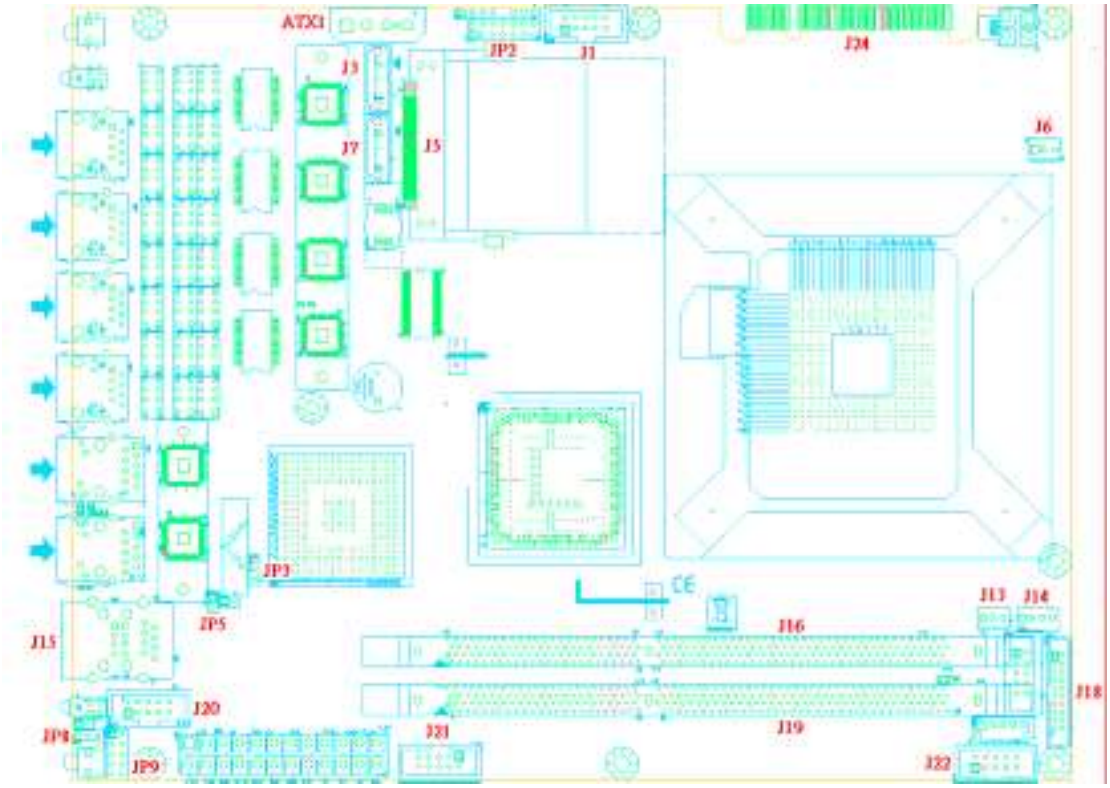

JP8:GPIO Voltage Select

JP8	Function
1-2 Short	+5v *
2-3 Short	+3.3v

JP5:Watch Dog Timer(WDT) Select

JP5	Function
Short	Enable WDT Function *
Open	Disable WDT Function

JP3: CMOS Clear

JP3	Function
1-2 Short	Normal Operation *
2-3 Short	Clear CMOS Contents

Connector	Function
J14	CPU FAN connector
J6、J13	SYS FAN connector
J1	VGA connector
J3、J7	SATA connector
J15	CONSOLE+USB connector
J20	USB connector
J21	COM2 connector
J22	K/B、M/S connector
JP9	8-bit GPIO connector
JP2	Front Panel
J5	CF connector
JP5	Reserved
ATX1	+5V & +12V power connector(only output)
J16、J19	Memory Slot
J24	PCIE *8 Golden Finger
J18	TPM connector
J17、JP1、JP4、JP7	Reserved

J1: VGA connector definition

Pin	Signal Name	Pin	Signal Name
1	RED	2	DDCCLK
3	GREEN	4	Ground
5	BLUE	6	DDCDATA
7	VSYNC	8	Ground
9	HSYNC	10	N/C

JP9: 8-bit GPIO connector definition

Pin	Signal Name	Pin	Signal Name
1	GPIO	2	GPIO
3	GPIO	4	GPIO
5	GPIO	6	GPIO
7	GPIO	8	GPIO
9	Ground	10	+5V or +3.3V

JP2: Front Panel PIN definition

Pin	Signal Name	Pin	Signal Name
1	HD+(+5V)	2	GP+(+5V)
3	HD-	4	YP+
5	GND	6	PWR SW
7	RSET	8	GND
9	DEFAULT-	10	GND
11	+5V	12	+5V
13	GPIO	14	GPIO

2.4 The Chassis

The system is integrated in a customized 1U chassis (***Fig. 2-1, Fig. 2-2***). On the front panel you will find, six LAN ports, two USB ports and a COM port.

Fig. 2-1 *Front view of the chassis*

Fig. 2-2 *Rear view of the chassis*

2.5 Open the Chassis

1. Loosen the 6 screws of the chassis, two on each side and the rest two on the back, to remove the top lead (***Fig. 2-3***).

Fig. 2-3 *Take off screws*

2. The top lead (***Fig. 2-4***) can be removed from the base stand (***Fig. 2-5***).

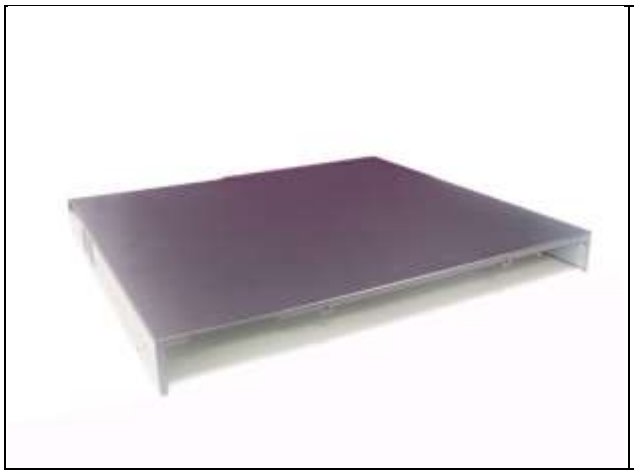

Fig. 2-4 *The top lead*

Fig. 2-5 *The base stand*

2.6 Install a Different Processor

To install a CPU

1. Local the CPU socket on the motherboard

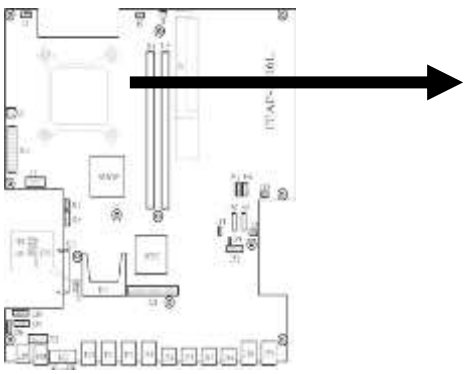

CPU socket 775

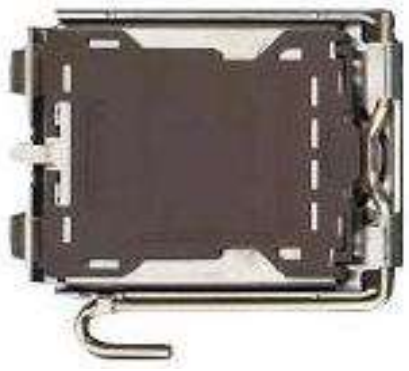

Before installing the CPU, make sure that the socket box is facing towards you and the load lever is on your left.

2. Press the load lever with your thumb (A), then move it to left (B) until it is released from the retention tab

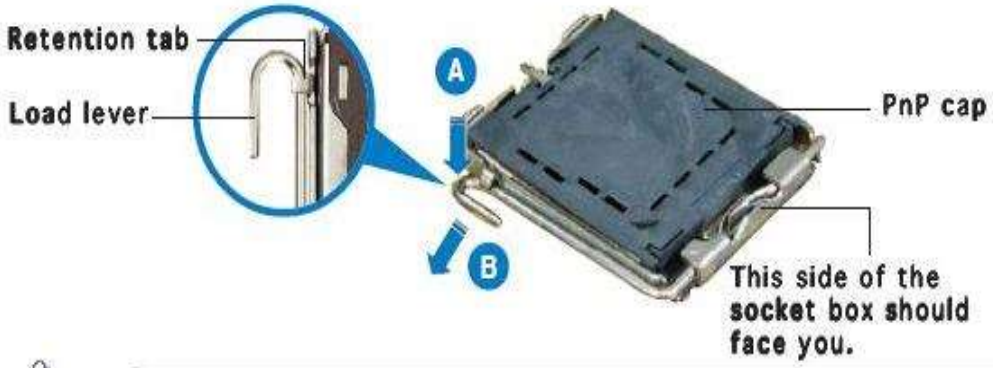

To prevent damage to the socket pins, do not remove the PnP cap unless you are installing a CPU.

3. Lift the load lever in the direction of the arrow to a 135° angle

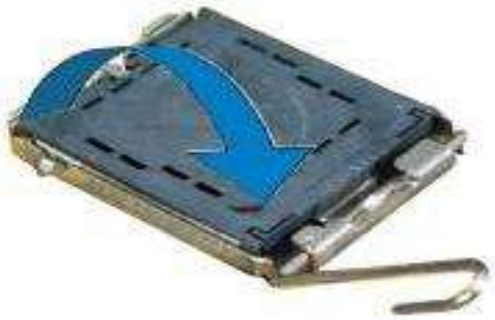

4. Lift the load plate with your thumb and forefinger to a 100° angle (A), then push the PnP cap from the load plate window to remove (B)

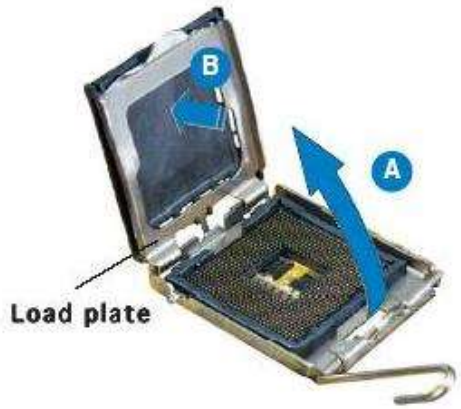

5. Position the CPU over the socket, making sure that the gold triangle is on the bottom-left corner of the socket. The socket alignment key should fit into the CPU notch

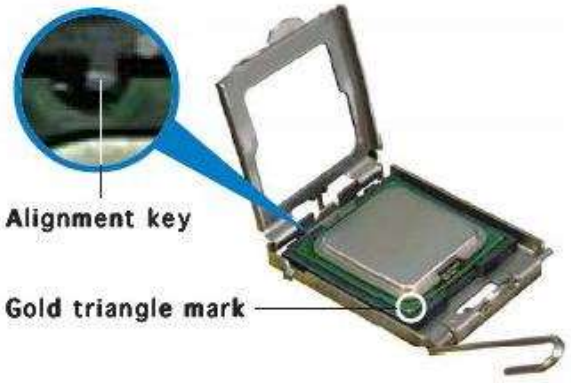

6. Close the load plate (A), then push the load lever (B) until it snaps into the retention tab

The CPU fits in only one correct orientation. DO NOT force the CPU into the socket to prevent bending the connectors on the socket and damaging the CPU!

Configure Processor Speed

The system was designed to self-detect its CPU speed. So it does not require any system adjustment.

2.7 Remove and Install DIMM

Follow these steps to upgrade RAM module:

Make sure to unplug the power supply before adding or removing DIMMs or other system components. Failure to do so may cause severe damage to both the motherboard and the components.

1. Unlock a DIMM socket by pressing the retaining clips outward
2. Align a DIMM on the socket such that the notch on the DIMM matches the break on the socket

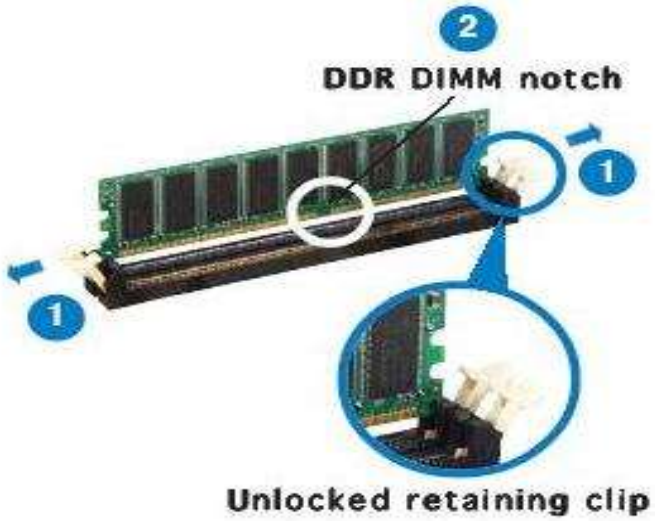

A DDR DIMM is keyed with a notch so that it fits in only one direction. DO NOT force a DIMM into a socket to avoid damaging the DIMM.

3. Firmly insert the DIMM into the socket until the retaining clips snap back in place and the DIMM is properly seated

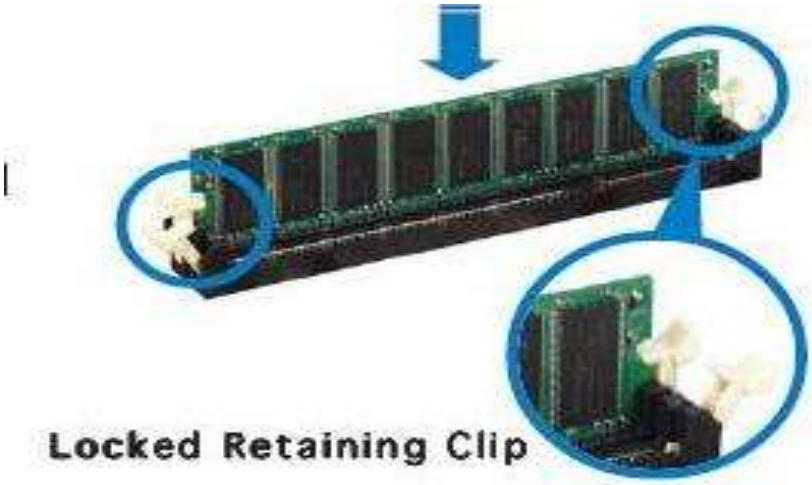

Follow these steps to remove a DIMM:

1. Simultaneously press the retaining clips outward to unlock the DIMM

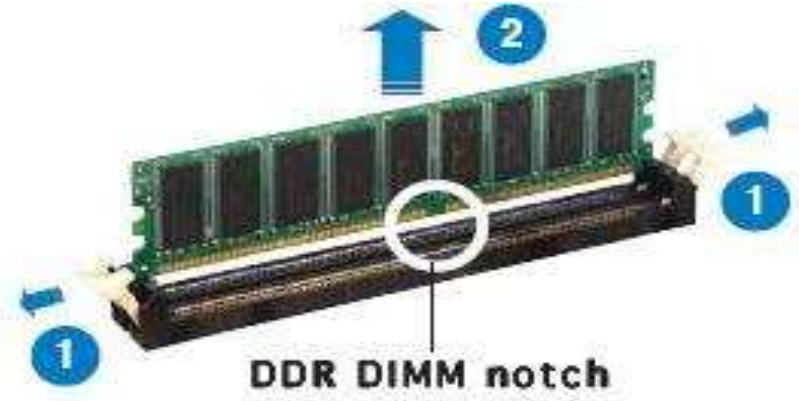

2. Remove the DIMM from the socket

2.8 Remove and Install Compact Flash Card

1. Insert the Compact Flash Card into the CF interface

Compact Flash Card

Insert Compact Flash Card into the CF interface

3. The completed installation of Compact Flash Card is shown as

Completion of Compact Flash Card connection

2.9 Remove and Install Battery

1. Press the metal clip back to eject the button battery
2. Replace it with a new one by pressing the battery with fingertip to restore the battery

Eject the battery

Restore the battery

2.10 Install HDD

The system has an internal drive bay for one 3.5" or 2.5”SATA hard disk drive. If the HDD is not pre-installed, you can install it by yourself. Follow the steps below to install the HDD:

1. There are four hard disk kits in the CAR-3006 system :

   Hard disk fixed plate and hard disk tray

1. No add any card, use 3.5” HDD kit:

3.5”HDD Kit

Fix the hard disk drive on the HDD Bracket with four screws

Fasten the two screws to lock Hard disk fixed plate and chassis

Connect Power cable and HDD cable to CAR-3006 system board

2. Add riser card, use 3.5” HDD kit:

3.5”HDD Kit

Fix the hard disk drive on the HDD Bracket with four screws

Fasten the four screws to lock Hard disk fixed plate and chassis base

Connect Power cable and HDD cable to CAR-3006 system board

3. Add riser card and ABN series card, use 3.5” HDD kit:

3.5”HDD Kit

Fix the hard disk drive on the HDD Bracket with four screws

Fasten the four screws to lock Hard disk fixed plate and chassis base

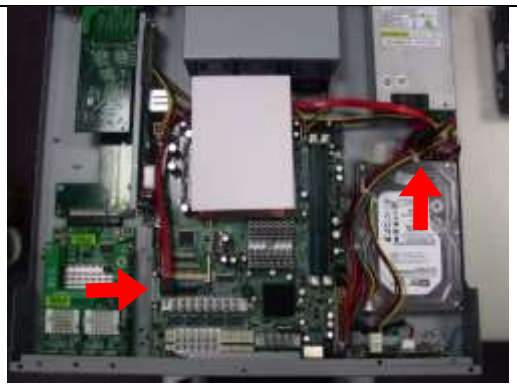

Connect Power cable and HDD cable to CAR-3006 system board

4. Use 2.5” HDD tray kit:

2.5”HDD tray Kit

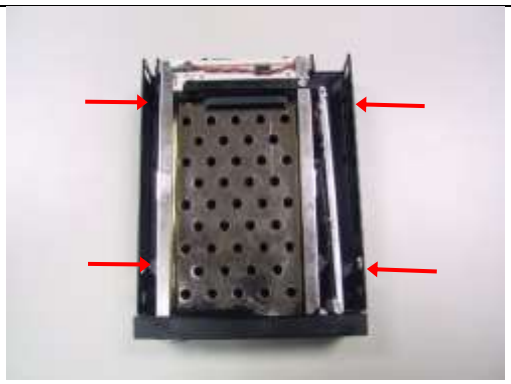

Fix the hard disk tray on the HDD Bracket with four screws

Fasten the four screws to lock HD tray fixed plate and chassis base

Please push button open

Install 2.5”HD

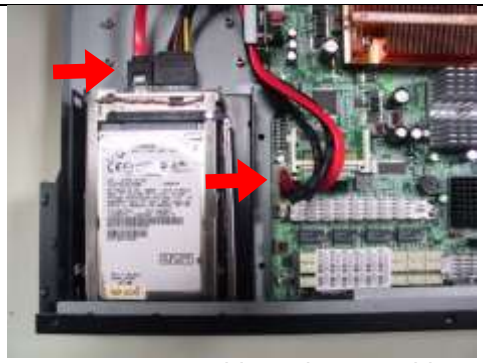

Connect Power cable and HDD cable to CAR-3006 system board

2.11 Ear Mount Kit Installation

The CAR-3006 series shipped with 2 ear mount kits. The following is the installation instruction of these ear mounts:

1. Take out the L shape ear mount kits. One ear mount fits on one side of the chassis,
2. Placing the side with four holes agonists the chassis and the side with two holes face outward.
3. Fasten five screws on each side

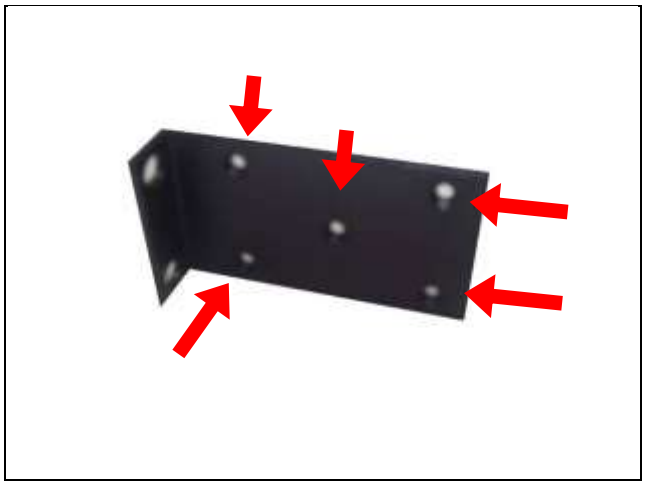

Fasten the screws to the side

2.12 Remove EZIO / LCD

The CAR-3006 series support EZIO modules. The following is the remove instruction of these EZIO/LCD modules:

1. Remove all cables from EZIO

Fig.2-14 *Remove the cable from EZIO*

Fig.2-15 *After remove the cable from EZIO*

2. Remove the screws from chassis.

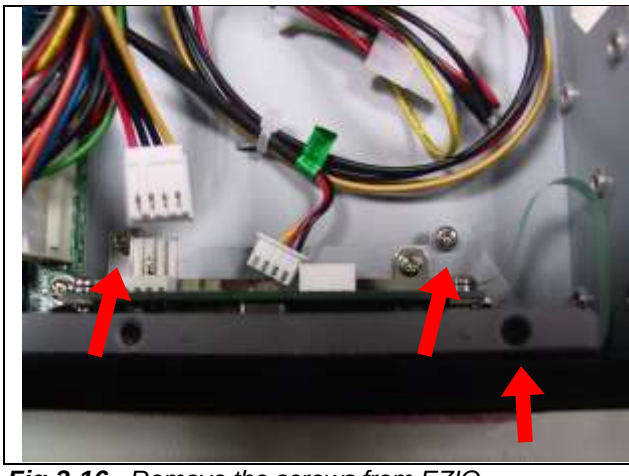

Fig.2-16 *Remove the screws from EZIO*

Fig.2-17 *Remove screws from chassis.*

EZIO

2.13 Remove Power Supply

The following is the remove step instruction of power supply.

1. Remove all power cables from main board.
2. Remove the screws from PSU

Remove all cables from board

Remove all cables from board

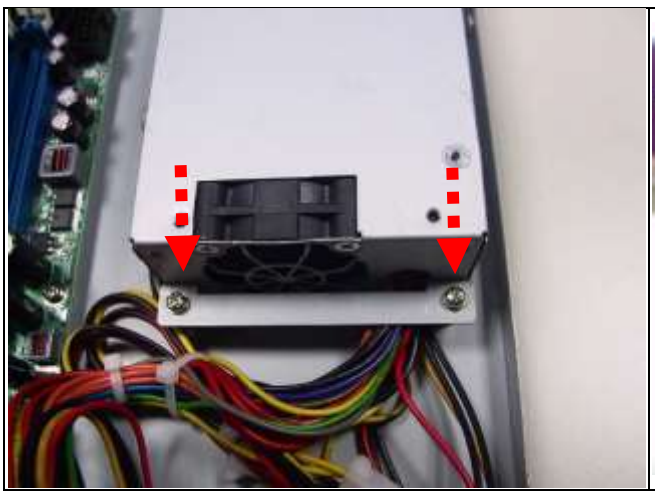

Remove the screws from PSU

Remove the screws from PSU

Complete remove power supply

2.14 Remove main board

The following is the remove step instruction of main board.

1. Remove all cables and heatsink from main board.
2. Remove all screws from main board.

Remove all cables and heatsink from main board

Complete remove main board

2.15 Use a Client Computer

Connection Using Hyper Terminal

If users use a headless CAR-3006 system, which has no mouse/keyboard and VGA output connected to it, the console may be used to communicate with CAR-3006.

To access CAR-3006 via the console, Hyper Terminal is one of many choices. Follow the steps below for the setup:

***Note**: Terminal software may need to update for correct console output.*

1. Execute HyperTerminal under C:\Program Files\Accessories\HyperTerminal
2. Enter a name to create new dial

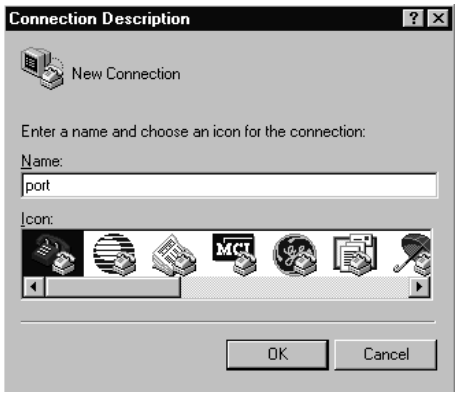

3. For the connection settings, make it Direct to Com1.

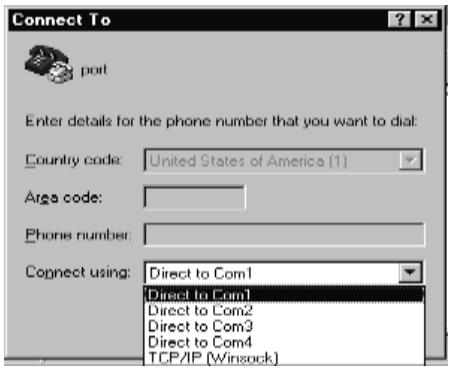

4. Please make the port settings to Baud rate 19200, Parity None, Data bits 8, Stop bits 1

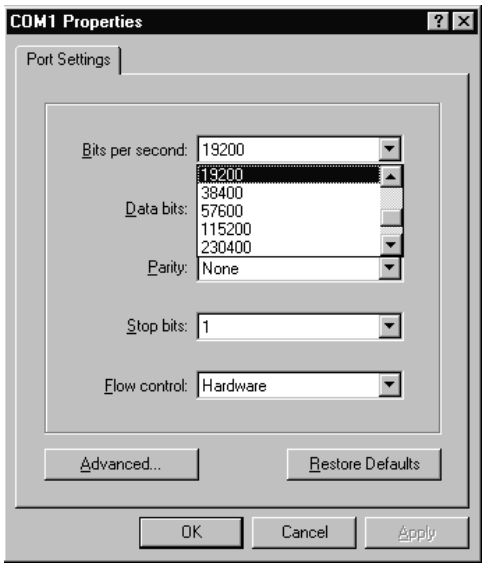

5.5. Turn on the power of CAR-3006 system, after following screen was shown:

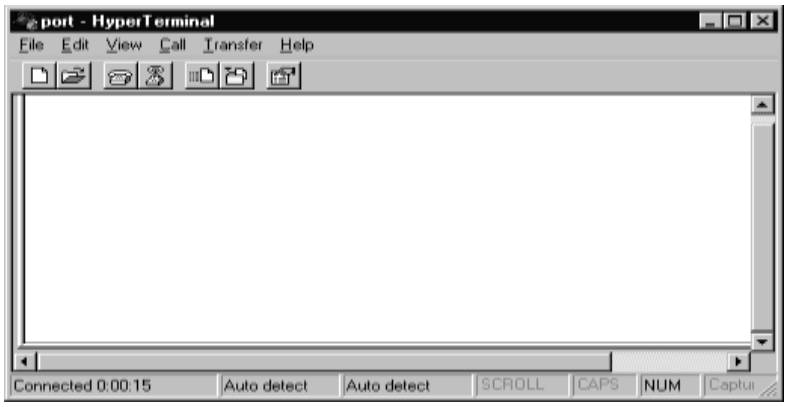

6.6. You can then see the boot up information of CAR-3006.

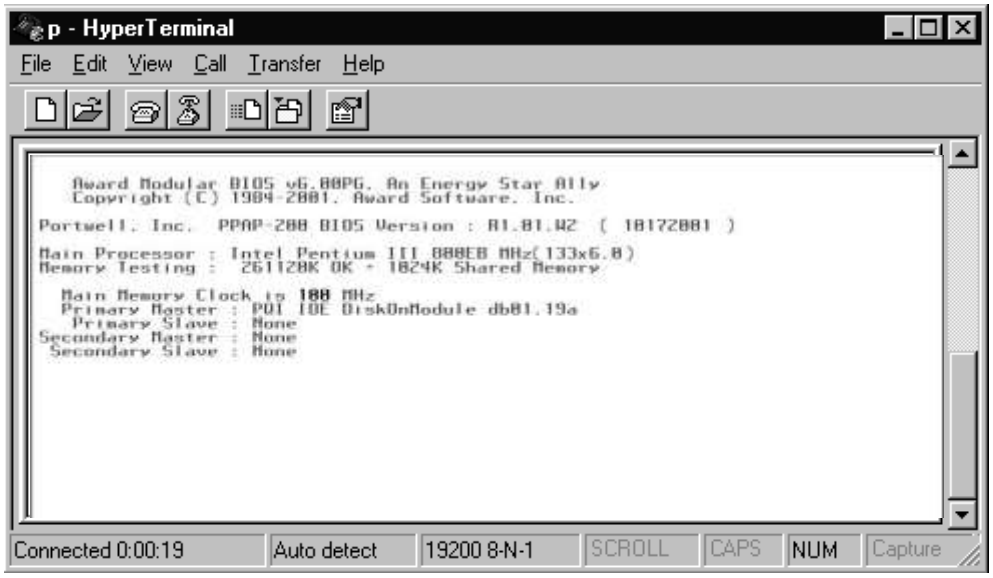
p - HyperTerminal
File Edit View Call Transfer Help
Award Modular BIOS v6.00PG, An Energy Star Ally
Copyright (C) 1984-2001, Award Software, Inc.
Portwell, Inc. PPAP-200 BIOS Version : R1.01.02 (10172001)
Main Processor : Intel Pentium III 800EB MHz(133x6.0)
Memory Testing : 261120K OK + 1024K Shared Memory
Main Memory Clock is 100 MHz
Primary Master : PCI IDE DiskOnModule db01.19a
Primary Slave : None
Secondary Master : None
Secondary Slave : None
Connected 0:00:19
Auto detect
19200 8-N-1
SCROLL
CAPS
NUM
Capture

7. When message “Hit <DEL> if you want to run Setup” appear during POST, after turning on or rebooting the computer, press **<Tab>** key ***immediately*** to enter BIOS setup program.

This is the end of this section. If the terminal did not port correctly, please check the previous steps.

Chapter 3 BIOS Setting

BIOS Setup Information

Power on the system, press the <Del> to run BIOS setup. After you press the <Delete> key, the main BIOS setup menu displays. You can access the other setup screens from the main BIOS setup menu, such as the Chipset and Power menus.

The BIOS setup/utility uses a key-based navigation system called hot keys. Most of the BIOS setup utility hot keys can be used at any time during the setup navigation process. These keys include <F1>, <F10>, <Enter>, <ESC>, <Arrow> keys, and so on.

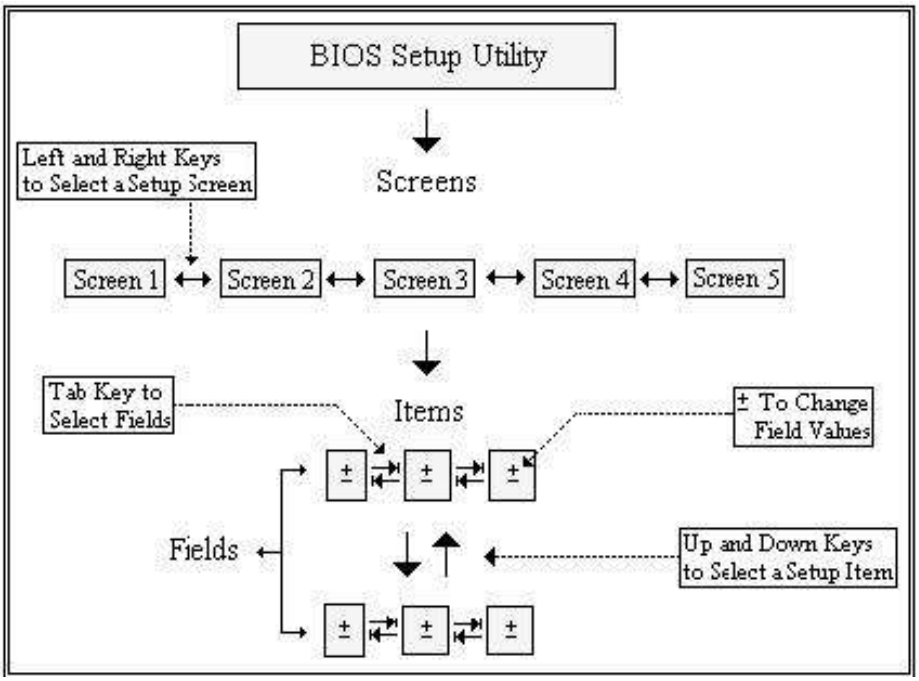

Control Keys

Key	Function
↑↓**Up /Down**	The *Up and Down* <Arrow> keys allow you to select a setup item or sub-screen.
→ ← **Left/Right**	The *Left and Right* <Arrow> keys allow you to select a setup screen. For example: Main screen, Advanced screen, Chipset screen, and so on.
+ - Plus/ Minus	The *Plus and Minus* <Arrow> keys allow you to change the field value of a particular setup item. For example: Date and Time.
Tab	The <Tab> key allows you to select setup fields.

Hot Key	Description
F1	The <F1> key allows you to display the *General Help screen*. Press the <F1> key to open the *General Help screen*. 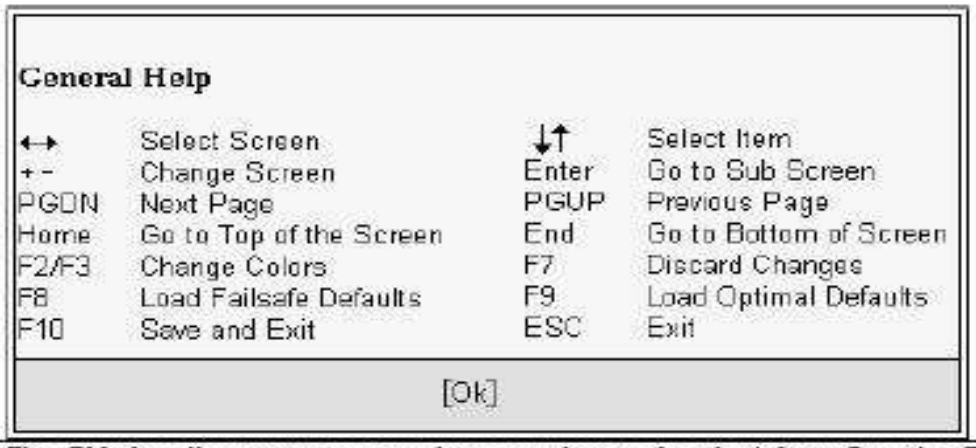
F10	The <F10> key allows you to save any changes you have made and exit Setup. Press the <F10> key to save your changes. The following screen will appear: 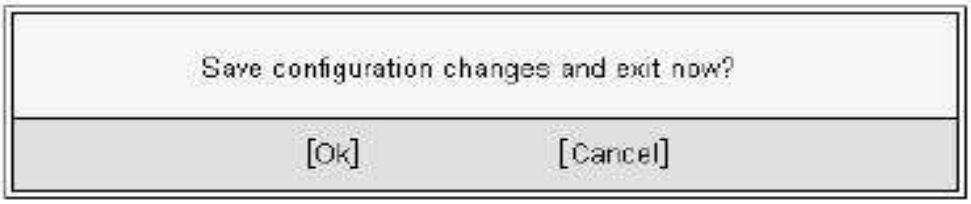 Press the <Enter> key to save the configuration and exit. You can also use the <Arrow> key to select *Cancel* and then press the <Enter> key to abort this function and return to the previous screen.
ESC	The <Esc> key allows you to discard any changes you have made and exit the Setup. Press the <Esc> key to exit the setup without saving your changes. The following screen will appear: 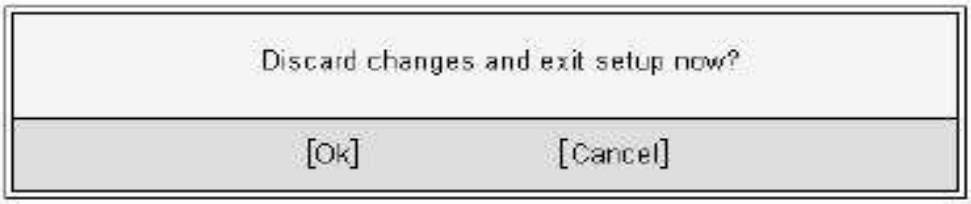 Press the <Enter> key to discard changes and exit. You can also use the <Arrow> key to select *Cancel* and then press the <Enter> key to abort this function and return to the previous screen.
Enter	The <Enter> key allows you to display or change the setup option listed for a particular setup item. The <Enter> key can also allow you to display the setup sub- screens.

Main Menu

When you first enter the Setup Utility, you will enter the Main setup screen. You can always return to the Main setup screen by selecting the *Main* tab. There are two Main Setup options. They are described in this section.

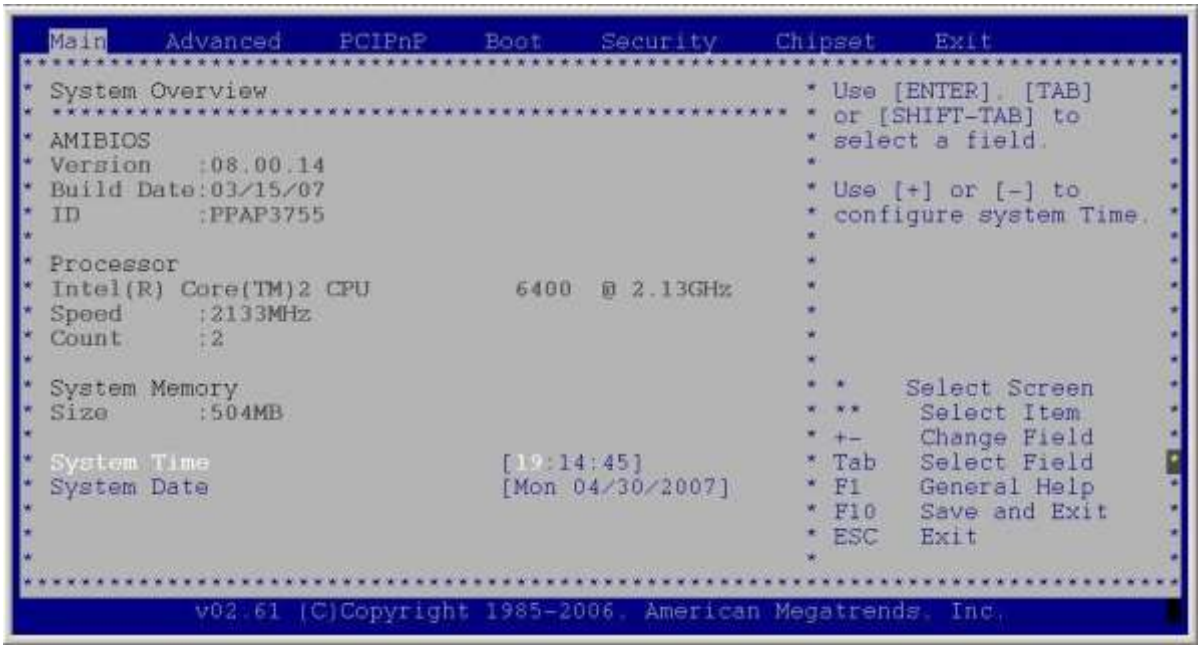

System Date / Time
Use this option to change the system time and date. Highlight System Time or System Date using the <Arrow> keys. Enter new values through the keyboard. Press the <Tab> key or the <Arrow> keys to move between fields. The date must be entered in MM/DD/YY format. The time is entered in HH:MM:SS format.

➢ Advanced BIOS Setup

Select the *Advanced* tab from the setup screen to enter the Advanced BIOS Setup screen. You can select any of the items in the left frame of the screen, such as SuperIO Configuration, to go to the sub menu for that item. You can display an Advanced BIOS Setup option by highlighting it using the <Arrow> keys. All Advanced BIOS Setup options are described in this section. The Advanced BIOS Setup screen is shown below. The sub menus are described on the following pages.

.

➢ IDE Configuration Setup

From the IDE Configuration screen, press <Enter> to access the sub menu. Use the up and down <Arrow> keys to select an item. The settings are described on the following pages.

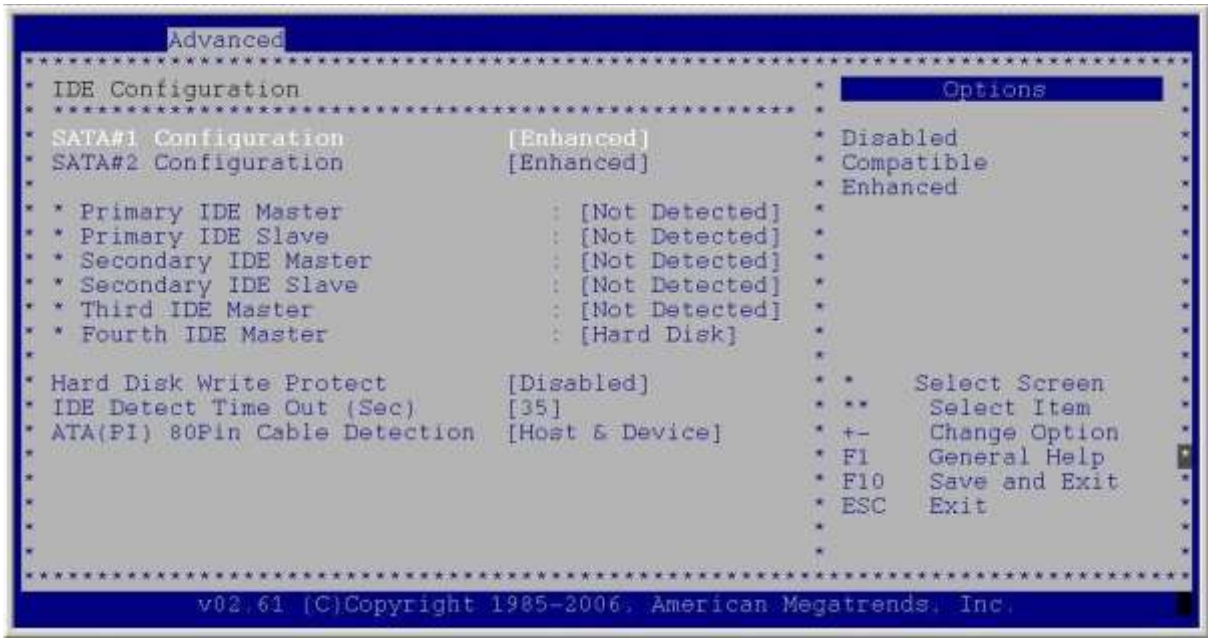
Advanced
IDE Configuration
SATA#1 Configuration [Enhanced]
SATA#2 Configuration [Enhanced]
* Primary IDE Master : [Not Detected]
* Primary IDE Slave : [Not Detected]
* Secondary IDE Master : [Not Detected]
* Secondary IDE Slave : [Not Detected]
* Third IDE Master : [Not Detected]
* Fourth IDE Master : [Hard Disk]
Hard Disk Write Protect [Disabled]
IDE Detect Time Out (Sec) [35]
ATA(PI) 80Pin Cable Detection [Host & Device]
Options
Disabled
Compatible
Enhanced
* Select Screen
** Select Item
+- Change Option
F1 General Help
F10 Save and Exit
ESC Exit
v02.61 (C)Copyright 1985-2006, American Megatrends, Inc.

➢ SUPER IO CONFIGURATION

Super IO Configuration

You can use this screen to select options for the Super I/O settings. Use the up and down <Arrow> keys to select an item. Use the <Plus> and <Minus> keys to change the value of the selected option. The settings are described on the following pages. The screen is shown below.

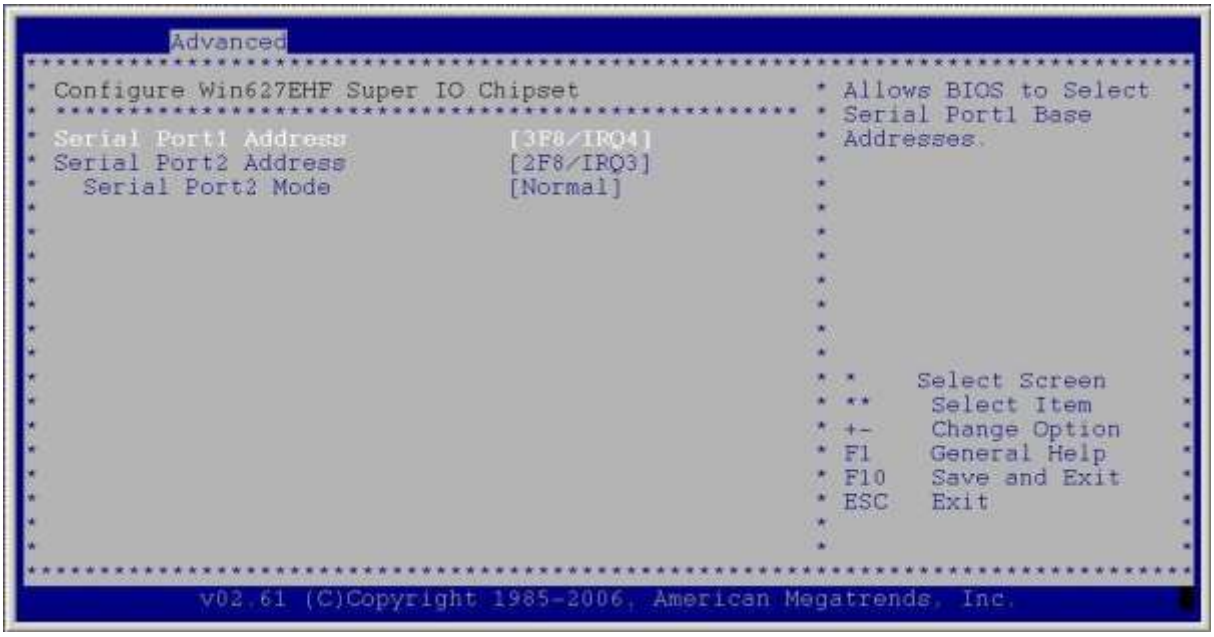

➢ REMOTE ACCESS CONFIGURATION

Remote Access Configuration

You can use this screen to select options for the Remote Access Configuration. Use the up and down <Arrow> keys to select an item. Use the <Plus> and <Minus> keys to change the value of the selected option. The settings are described on the following pages. The screen is shown below.

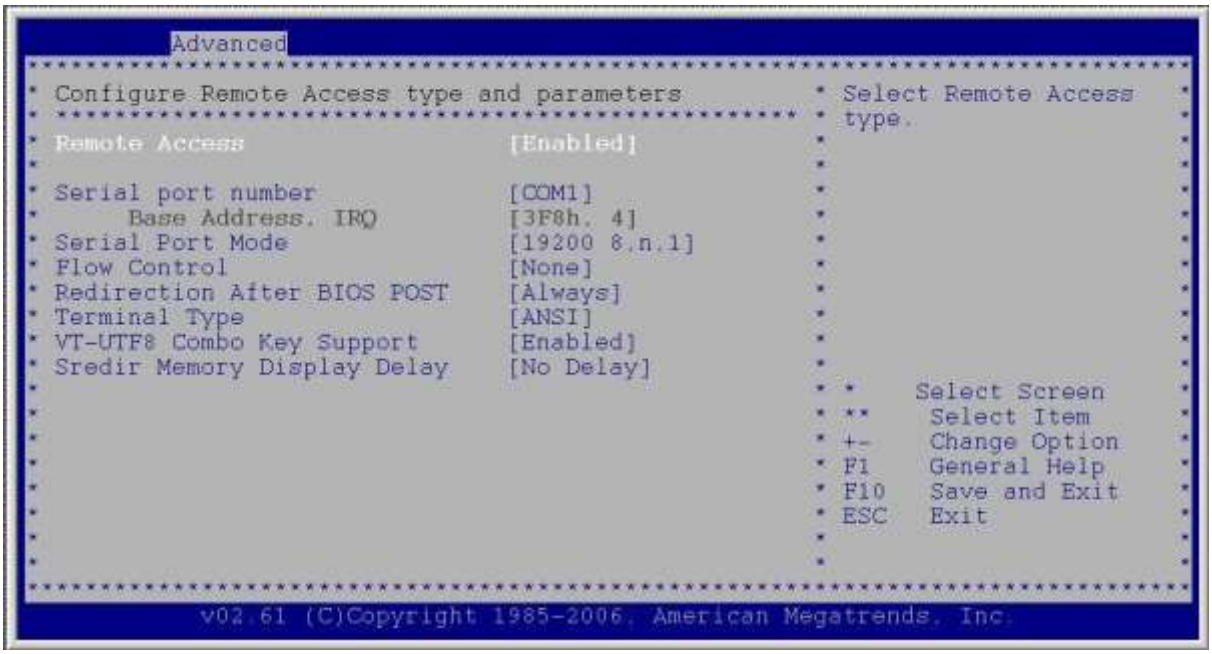

Remote Access
You can disable or enable the BIOS remote access feature here.

Serial Port Number
Select the serial port you want to use for console redirection. You can set the value for this option to either *COM1* or *COM2*.

Serial Port Mode
Select the baud rate you want the serial port to use for console redirection.

➢ USB Configuration

You can use this screen to select options for the USB Configuration. Use the up and down <Arrow> keys to select an item. Use the <Plus> and <Minus> keys to change the value of the selected option. The settings are described on the following pages. The screen is shown below.

Advanced
USB Configuration
Module Version - 2.24.0-12.4
USB Devices Enabled :
1 Keyboard, 1 Mouse
Legacy USB Support [Enabled]
Port 64/60 Emulation [Disabled]
USB 2.0 Controller Mode [HiSpeed]
BIOS EHCI Hand-Off [Enabled]
Enables support for legacy USB. AUTO option disables legacy support if no USB devices are connected.
* Select Screen
** Select Item
+- Change Option
F1 General Help
F10 Save and Exit
ESC Exit
v02.61 (C)Copyright 1985-2006, American Megatrends, Inc.

Legacy USB Support
Legacy USB Support refers to the USB mouse and USB keyboard support. Normally if this option is not enabled, any attached USB mouse or USB keyboard will not become available until a USB compatible operating system is fully booted with all USB drivers loaded. When this option is enabled, any attached USB mouse or USB keyboard can control the system even when there is no USB drivers loaded on the system. Set this value to enable or disable the Legacy USB Support. The Optimal and Fail-Safe default setting is *Disabled*.

➢ CPU Configuration

You can use this screen to select options for the CPU Configuration. Use the up and down <Arrow> keys to select an item. Use the <Plus> and <Minus> keys to change the value of the selected option.

Note: The CPU Configuration setup screen varies depending on the installed processor.

➢ Boot Settings

Select the *Boot* tab from the setup screen to enter the Boot BIOS Setup screen.

➢ BOOT SETTINGS CONFIGURATION SCREEN

Boot Settings Configuration

Use this screen to select options for the Boot Settings Configuration. Use the up and down <Arrow> keys to select an item. Use the <Plus> and <Minus> keys to change the value of the selected option. The settings are described on the following pages. The screen is shown below.

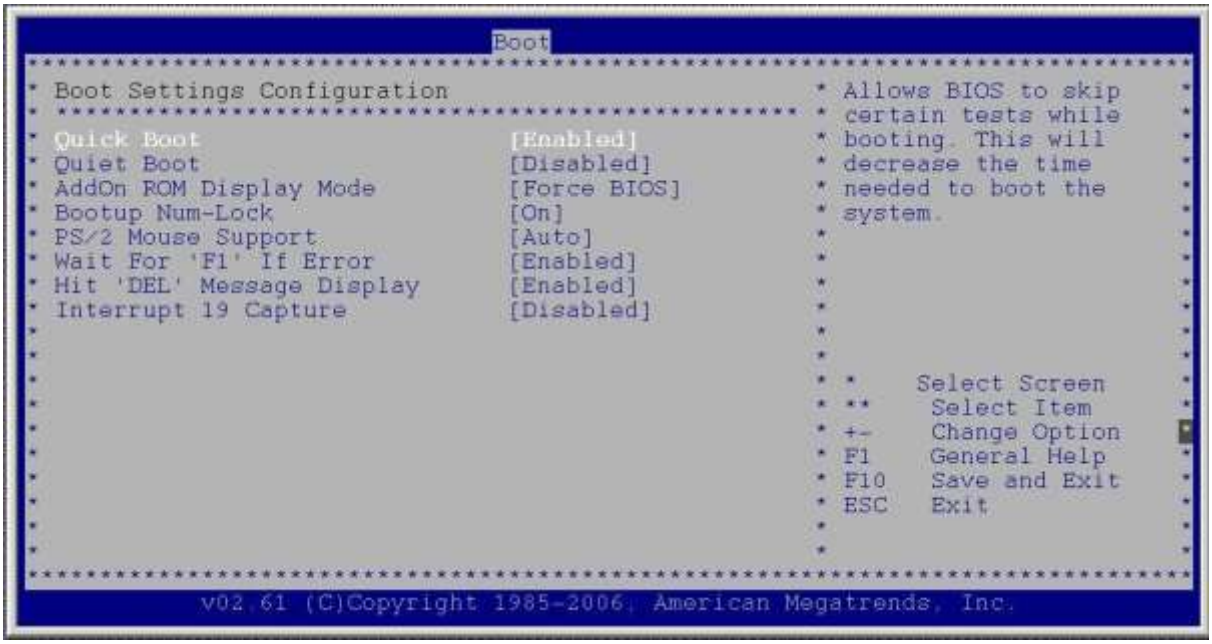
Boot
Boot Settings Configuration
Quick Boot [Enabled]
Quiet Boot [Disabled]
AddOn ROM Display Mode [Force BIOS]
Bootup Num-Lock [On]
PS/2 Mouse Support [Auto]
Wait For 'F1' If Error [Enabled]
Hit 'DEL' Message Display [Enabled]
Interrupt 19 Capture [Disabled]
Allows BIOS to skip certain tests while booting. This will decrease the time needed to boot the system.
* Select Screen
** Select Item
+- Change Option
F1 General Help
F10 Save and Exit
ESC Exit
v02.61 (C)Copyright 1985-2006, American Megatrends, Inc.

Quick Boot

The Optimal and Fail-Safe default setting is *Disabled*.

Quiet Boot

Set this value to allow the boot up screen options to be modified between POST messages or OEM logo. The Optimal and Fail-Safe default setting is *Enabled*.

Add-On ROM Display Mode

Set this option to display add-on ROM (read-only memory) messages. The Optimal and Fail-Safe default setting is *Force BIOS*. An example of this is a SCSI BIOS or VGA BIOS.

Boot up Num-Lock

Set this value to allow the Number Lock setting to be modified during boot up. The Optimal and Fail-Safe default setting is *On.*

PS/2 Mouse Support

Set this value to allow the PS/2 mouse support to be adjusted. The Optimal and Fail-Safe default setting is *Enabled*

Interrupt 19 Capture

Set this value to allow option ROMs such as network controllers to trap BIOS interrupt 19.

➢ BOOT DEVICE PRIORITY

Boot Device Priority

Use this screen to specify the order in which the system checks for the device to boot from. To access this screen, select Boot Device Priority on the Boot Setup screen and press <Enter>. The following screen displays:

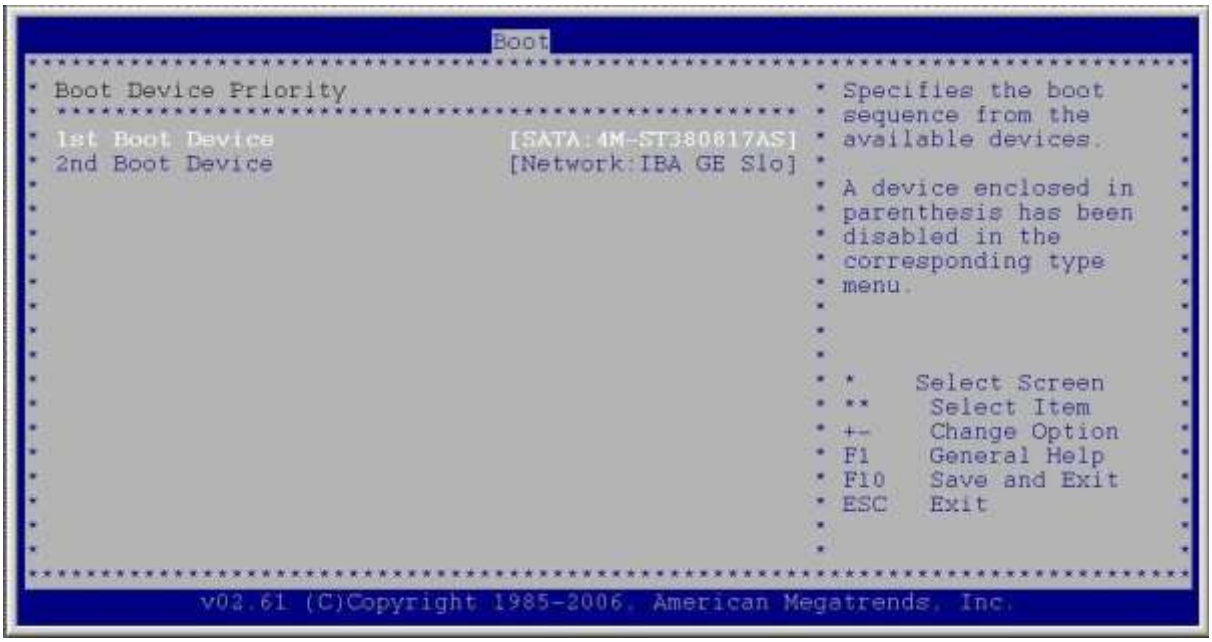
Boot
Boot Device Priority
1st Boot Device [SATA:4M-ST380817AS]
2nd Boot Device [Network:IBA GE Slo]
Specifies the boot sequence from the available devices.
A device enclosed in parenthesis has been disabled in the corresponding type menu.
* Select Screen
** Select Item
+- Change Option
F1 General Help
F10 Save and Exit
ESC Exit
v02.61 (C)Copyright 1985-2006, American Megatrends, Inc.

➢ Exit Menu

Select the *Exit* tab from the setup screen to enter the Exit BIOS Setup screen. You can display an Exit BIOS Setup option by highlighting it using the <Arrow> keys. All Exit BIOS Setup options are described in this section. The Exit BIOS Setup screen is shown below.

Main Advanced PCIPnP Boot Security Chipset Exit
Exit Options
Save Changes and Exit
Discard Changes and Exit
Discard Changes
Load Optimal Defaults
Load Failsafe Defaults
Exit system setup after saving the changes.
F10 key can be used for this operation.
* Select Screen
** Select Item
Enter Go to Sub Screen
F1 General Help
F10 Save and Exit
ESC Exit
v02.61 (C)Copyright 1985-2006, American Megatrends, Inc.

Saving Changes and Exit

When you have completed the system configuration changes, select this option to leave Setup and reboot the computer so the new system configuration parameters can take effect. Select Exit Saving Changes from the Exit menu and press <Enter>.

Discarding Changes and Exit

Select this option to quit Setup without making any permanent changes to the system configuration. Select Exit Discarding Changes from the Exit menu and press <Enter>.

Discard Changes
Select Discard Changes from the Exit menu and press <Enter>.

Load Optimal Defaults
Automatically sets all Setup options to a complete set of default settings when you select this option. Select Load Optimal Defaults from the Exit menu and press <Enter>.

Load Fail-Safe Defaults
Automatically sets all Setup options to a complete set of default settings when you select this option. The Fail-Safe settings are designed for maximum system stability, but not maximum performance. Select the Fail-Safe Setup options if your computer is experiencing system configuration problems.
Select Load Fail-Safe Defaults from the Exit menu and press <Enter>.